

Introduction

The Intaglio (part number 210208) modifies the firmware of a Supra. Each Intaglio has a version number printed on the back.

IMPORTANT: Always check the version number before using the Intaglio.

Upgrading a Supra

- 1) Loosen the six screws on the outside of the Supra and swing the cover open.
- 2) Insert the Intaglio into CON 1 (See **Figure 1**) with the orange label facing right.
- 3) Press **ENTER** to access the main menu. Acknowledge any alarms before continuing.
- 4) Press **6** to enter the diagnostics menu.
- 5) Press **↓** until the cursor is on the line that reads **Change Version** then press **ENTER**.
- 6) Check the version number on the screen to make sure you are upgrading to the proper version. If in doubt, press **BACK** and remove the Intaglio.
- 7) If the version number is correct, press **ENTER**.
- 8) The Supra will display a warning indicating that ventilation will suspend. During this time, variable stages will run at their current speed, and all relays will remain at their current state.
- 9) If you are sure you want to perform the upgrade, change the **No** to **Yes** then press **ENTER**.
- 10) During the upgrade, any variable stages that are on will surge to full speed for about two seconds. When the upgrade is complete, the Supra will reset and all relays and VAR stages will return to normal operation.
- 11) Remove the Intaglio.

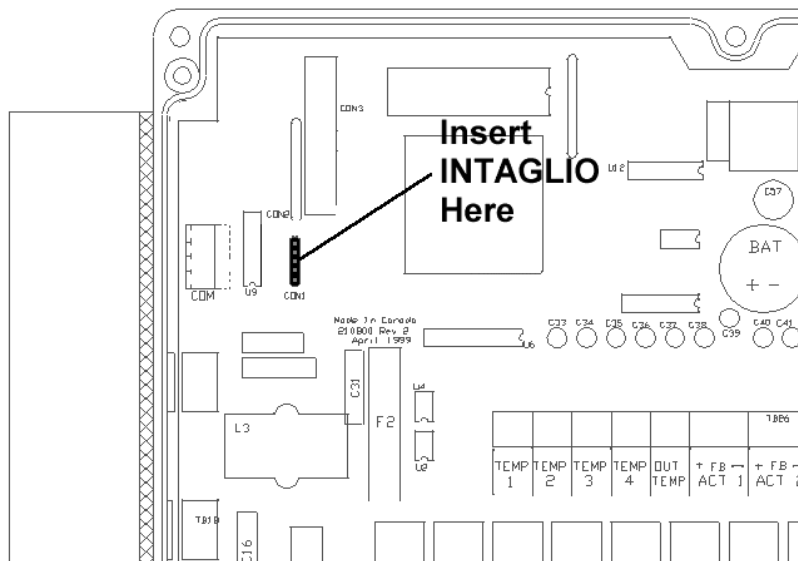


Figure 1: Supra Layout

Phason Inc.

2 Terracon Place
Winnipeg, Manitoba, Canada
R2J 4G7

Phone: 204-233-1400

Fax: 204-233-3252